

**STAINLESS STEEL
SINGLE BOWL KITCHEN DROP-IN SINK**



Model	Bowl Size L x W x D	Overall Size L x W	Cut-Out L x W	# Drains	# Clips	Approx. Wt.
SS-1-1919-7RE	14 x 16 x 7.5	19 x 19	18.25 x 18.25	1	12	16 lbs.
SS-1-1919-10RE	14 x 16 x 10	19 x 19	18.25 x 18.25	1	12	18 lbs.
SS-1-1919-12RE	14 x 16 x 12	19 x 19	18.25 x 18.25	1	12	20 lbs.
SS-1-2321-7RE	20 x 16 x 7.5	23 x 21	22.25 x 20.25	1	12	20 lbs.
SS-1-2321-10RE	20 x 16 x 10	23 x 21	22.25 x 20.25	1	12	22 lbs.
SS-1-2321-12RE	20 x 16 x 12	23 x 21	22.25 x 20.25	1	12	24 lbs.
SS-1-3125-10RE	28 x 20 x 10	31 x 25	30.25 x 24.25	1	12	42 lbs.
SS-1-3125-12RE	28 x 20 x 12	31 x 25	30.25 x 24.25	1	12	42 lbs.

LENGTH (L) IS LEFT TO RIGHT, WIDTH (W) IS FRONT TO BACK

**STAINLESS TEEL
DOUBLE BOWL KITCHEN DROP-IN SINK**



Model	Bowl Size L x W x D	Overall Size L x W	Cut-Out L x W	# Drains	# Clips	Approx. Wt.
SS-2-3321-7RE	14 X 16 X 7.5	33.5 x 21	32.75 x 22.25	2	12	33 lbs.
SS-2-3321-10RE	14 x 16 x 10	33.5 x 21	32.75 x 22.25	2	12	35 lbs.
SS-2-3321-12RE	14 x 16 x 12	33.5 x 21	32.75 x 22.25	2	12	37 lbs.
SS-2-4521-7RE	20 x 16 x 7.5	45.5 x 21	44.75 x 20.25	2	12	38 lbs.
SS-2-4521-10RE	20 x 16 x 10	45.5 x 21	44.75 x 20.25	2	12	39 lbs.
SS-2-4521-12RE	20 x 16 x 12	45.5 x 21	44.75 x 20.25	2	12	40 lbs.

LENGTH (L) IS LEFT TO RIGHT, WIDTH (W) IS FRONT TO BACK

STAINLESS STEEL DROP-IN BAR SINK



"U" Channel Installation

Faucets not included

MODEL #	Bowl Dim. L x W x D	Overall Dim. L x W	Cutout size 1 1/4" radius	# Clips	Ship Weight
SS-1-1214-5RE	9 x 9 x 5	12 x 14	11 1/4 x 13 1/4"	8	8 lbs.
SS-1-1715-7RE	14 x 10 x 7 1/2	17 x 15	16 1/4 x 14 1/4"	12	8 lbs.
SS-1-1715-10RE	20 x 16 x 12"	17 x 15	16 1/4 x 14 1/4"	12	11 lbs.

LENGTH (L) IS LEFT TO RIGHT, WIDTH (W) IS FRONT TO BACK

For Questions on Installation,
Please call our Customer Service Department at:
866-799-0106
or email us at:
support@www.alinebyadvancetabco.com



200 Heartland Boulevard, Edgewood, NY 11717-8380

© ADVANCE TABCO, JANUARY 2005

DROP-INS-RE

Aline™
By Advance Tabco®

**INSTALLATION INSTRUCTIONS
for
DROP-IN SINKS**



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH FREIGHT CARRIER**

Drop-ins manufactured by **ADVANCE TABCO** are designed and constructed for countertop installations. Only one compartment units intended for **HAND SINK USE** are NSF listed and approved. Suggested end use for drop-in sinks include dump sinks, bar sinks, wash sinks and hand sinks.

This Carton Contains:

- 1 ea. Sink Bowl
Basket Type Drain(s) (sub assembly)
(see chart).
Mounting Clips (see chart).

TOOLS REQUIRED:

- Drill Motor
- 1/4" - 1/2" Drill Bits
- Long Shank Screw Driver
- Ruler or Tape Measure
- Pencil
- Adjustable Wrenches (2)
- Pipe Wrench
- Saber Saw or "Jig" Saw

MATERIALS REQUIRED:

- Silicone Sealant
- Plumbers Putty
- Masking Tape

RECOMMENDED SAFETY MATERIALS:

- Safety Glasses
- Work Gloves

NOTE:

The corners of ALL cutouts are to have a **1-1/4"** Radius.

STEP 1

Remove all contents from carton.
(NOTE: Check for concealed damage - Notify Carrier of any damages immediately)

STEP 2

• Position sink (upside down) onto counter top surface at desired location. Trace outer edge of Self-Rim with pencil.


(NOTE: Ensure sink is parallel to counter edges. Procedure does not apply to DI-1-30 or DI-1-5SP. Refer to chart for Cut Out dimensions.)



<< **CORRECT MARKING PROCEDURE**


Pencil MUST be held straight as possible.

INCORRECT >> MARKING PROCEDURE

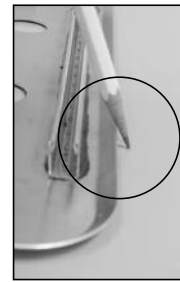

• Remove sink and draw a second line 3/8" parallel to the **inside** of the marked line - that will be the **CUT** line (As shown).


• **NOTE: BEFORE CUTTING COUNTER TOP, REFER TO THE CHART ON BACK TO VERIFY CUTOUT DIMENSIONS!**
REMEMBER: MEASURE TWICE, CUT ONCE!

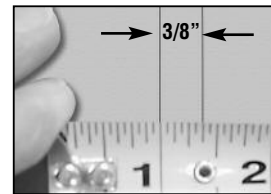

- Drill 1/4" hole 1" to the inside of cut line then use 1/2" drill bit to enlarge hole.
- Apply masking tape along outer (sink edge) line. This will prevent damaging countertop while cutting.
- Position jig saw blade into 1/2" hole and follow "CUT LINE".

STEP 3

- Install Drain - Apply a bead of Plumber's Putty as shown.

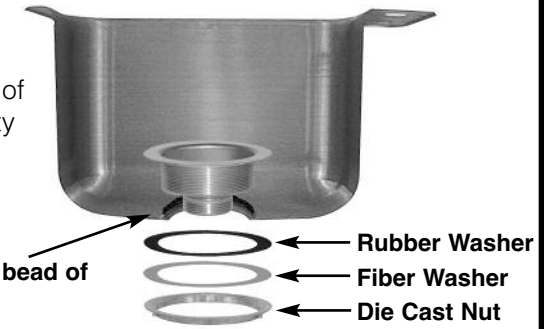

STEP 4

- Remove masking tape from counter surface and position sink into opening to ensure proper fit.

STEP 5

- Remove sink from opening and apply 1/4" bead sealant along edge of cut out.
- Install sink into counter top.
- Insert slotted end of screw thru clearance hole in clip and secure by turning Counter-Clockwise.
- Slide clip into end of Roll Form track (As Shown) and position where desired and hand tighten. Once all clips are in position, tighten with screwdriver - **DO NOT OVERTIGHTEN!**
- Wipe excess Silicone from counter surface.



STEP 6

- Connect Drain and Faucet supply lines.