

## FOR ADDING OPTIONAL CASTERS MODEL # EC-26RE



Figure 1



Figure 2

1. Install Donut Bumpers **FIRST** (if bumpers are being used) prior to caster installation .  
Slip rubber bumpers over the bottom of each post as shown in **Figure 1**.
2. Insert swivel stem caster into bottom of post (**Figure 2**).  
(May require light tapping with rubber mallet)

For Questions on Installation,  
Please call our Customer Service Department at:  
**866-799-0106**  
or email us at:  
[info@alinebyadvancetabco.com](mailto:info@alinebyadvancetabco.com)

 **A l i n e**™  
By Advance Tabco®

200 Heartland Boulevard, Edgewood, NY 11717-8380

© ADVANCE TABCO, April 2008

 **A l i n e**™  
By Advance Tabco®

## Assembly Instructions for Wire Shelving



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

**ADVANCE TABCO®** Wire Shelving is recommended for practical storage applications. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

## INSTALLATION REQUIREMENTS

### CONTENTS:


- (2) or (4) Chrome plated or epoxy wire shelves as per model.
- (4) Sets plastic tapered split sleeves (Per shelf).
- (4) Upright posts with adjustable feet (Packed Separately).

**TOOLS REQUIRED:** Rubber Mallet.

**STEP 1:** Check to ensure all parts are accounted for.

### STEP 2:

Place plastic tapered split sleeves onto each post at the selected height for bottom shelf. Make sure wider end of sleeve is facing towards bottom of post. Posts are numbered for convenience in leveling shelf (**Figure 1**).

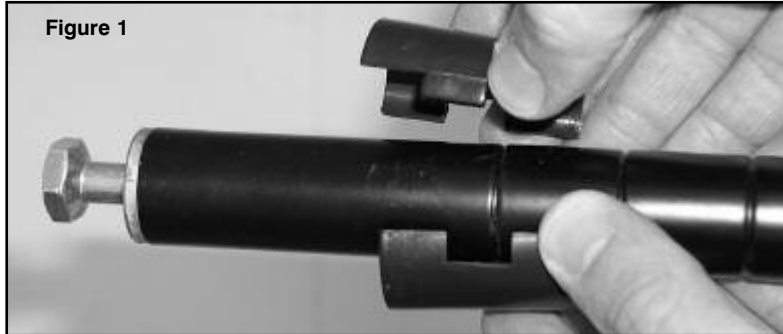

### STEP 3:

Place bottom shelf on its side and slide 4 upright posts through holes in corner of shelf. Push down onto sleeve until shelf fits tight. (**Figure 2**)



### STEP 4:

Stand Wire Shelf upright and repeat step 3 as it applies to number of shelves being installed.

Once assembled (If necessary) tap each shelf at corner with rubber mallet to "seat" onto split sleeve. (**Figure 3**).

